

**GÜNCEL TÜRKÇE OBD II ARIZA KODLARI  
TEKNİK BİLGİLERİ  
ARIZA TESPİT CİHAZLARI**

**OBD II B ÖZEL ARIZA KODLARI**

B1200 Climate Control Pushbutton Circuit Failure  
B1201 Fuel Sender Circuit Failure  
B1202 Fuel Sender Circuit Open  
B1203 Fuel Sender Circuit Short To Battery  
B1204 Fuel Sender Circuit Short To Ground  
B1205 EIC Switch-1 Assembly Circuit Failure  
B1206 EIC Switch-1 Assembly Circuit Open  
B1207 EIC Switch-1 Assembly Circuit Short To Battery  
B1208 EIC Switch-1 Assembly Circuit Short To Ground  
B1209 EIC Switch-2 Assembly Circuit Failure  
B1210 EIC Switch-2 Assembly Circuit Open  
B1211 EIC Switch-2 Assembly Circuit Short To Battery  
B1212 EIC Switch-2 Assembly Circuit Short To Ground  
B1213 Anti-Theft Number of Programmed Keys Is Below Minimum  
B1214 Running Board Lamp Circuit Failure  
B1215 Running Board Lamp Circuit Short to Battery  
B1216 Emergency & Road Side Assistance Switch Circuit Short to Ground  
B1217 Horn Relay Coil Circuit Failure  
B1218 Horn Relay Coil Circuit Short to Vbatt  
B1219 Fuel Tank Pressure Sensor Circuit Failure  
B1220 Fuel Tank Pressure Sensor Circuit Open  
B1222 Fuel Temperature Sensor #1 Circuit Failure  
B1223 Fuel Temperature Sensor #1 Circuit Open  
B1224 Fuel Temperature Sensor #1 Circuit Short to Battery  
B1225 Fuel Temperature Sensor #1 Circuit Short to Ground  
B1226 Fuel Temperature Sensor #2 Circuit Failure  
B1227 Fuel Temperature Sensor #2 Circuit Open  
B1228 Fuel Temperature Sensor #2 Circuit Short to Battery  
B1229 Fuel Temperature Sensor #2 Circuit Short to Ground  
B1231 Longitudinal Acceleration Threshold Exceeded  
B1232 See Manufacturer  
B1233 Glass Break Sensor Failure  
B1234 Mirror Switch Invalid Code  
B1235 Window Feedback Failure  
B1236 Window Feedback Loss of Signal  
B1237 Window Feedback Out of Range  
B1238 Over Temperature Fault  
B1239 Air Flow Blend Door Driver Circuit Failure  
B1240 Wiper Washer Rear Pump Relay Circuit Failure  
B1241 Wiper Washer Rear Pump Relay Circuit Short to Battery  
B1242 Air Flow Recirculation Door Driver Circuit Failure  
B1243 Express Window Down Switch Circuit Short to Battery  
B1244 Wiper Rear Motor Run Relay Circuit Failure  
B1245 Wiper Rear Motor Run Relay Circuit Short to Battery

B1246 Dim Panel Potentiometer Switch Circuit Failure  
B1247 Panel Dim Switch Circuit Open  
B1248 Passenger's Seatback Autoglide Rearward Switch Circuit Short to Ground  
B1249 Blend Door Failure  
B1250 Air Temperature Internal Sensor Circuit Failure  
B1251 Air Temperature Internal Sensor Circuit Open  
B1252 Air Temperature Internal Sensor Circuit Short To Battery  
B1253 Air Temperature Internal Sensor Circuit Short To Ground  
B1254 Air Temperature External Sensor Circuit Failure  
B1255 Air Temperature External Sensor Circuit Open  
B1256 Air Temperature External Sensor Circuit Short To Battery  
B1257 Air Temperature External Sensor Circuit Short To Ground  
B1258 Solar Radiation Sensor Circuit Failure  
B1259 Solar Radiation Sensor Circuit Open  
B1260 Solar Radiation Sensor Circuit Short To Battery  
B1261 Solar Radiation Sensor Circuit Short To Ground  
B1262 Servo Motor Defrost Circuit Failure  
B1263 Servo Motor Vent Circuit Failure  
B1264 Servo Motor Foot Circuit Failure  
B1265 Servo Motor Coolair Bypass Circuit Failure  
B1266 Servo Motor Airintake Left Circuit Failure  
B1267 Servo Motor Airintake Right Circuit Failure  
B1268 Servo Motor Potentiometer Defrost Circuit Failure  
B1269 Servo Motor Potentiometer Defrost Circuit Open  
B1270 Servo Motor Potentiometer Defrost Circuit Short To Battery  
B1271 Servo Motor Potentiometer Defrost Circuit Short To Ground  
B1272 Servo Motor Potentiometer Vent Circuit Failure  
B1273 Servo Motor Potentiometer Vent Circuit Open  
B1274 Servo Motor Potentiometer Vent Circuit Short To Battery  
B1275 Servo Motor Potentiometer Vent Circuit Short To Ground  
B1276 Servo Motor Potentiometer Foot Circuit Failure  
B1277 Servo Motor Potentiometer Foot Circuit Open  
B1278 Servo Motor Potentiometer Foot Circuit Short To Battery  
B1279 Servo Motor Potentiometer Foot Circuit Short To Ground  
B1280 Servo Motor Potentiometer Coolair Circuit Failure  
B1281 Servo Motor Potentiometer Coolair Circuit Open  
B1282 Servo Motor Potentiometer Coolair Circuit Short To  
Battery B1283 Servo Motor Potentiometer Coolair Circuit Short  
To Ground B1284 Servo Motor Potentiometer Airintake Left  
Circuit Failure B1285 Servo Motor Potentiometer Airintake Left  
Circuit Open  
B1286 Servo Motor Potentiometer Airintake Left Circuit Short To Battery  
B1287 Servo Motor Potentiometer Airintake Left Circuit Short To Ground  
B1288 Servo Motor Potentiometer Airintake Right Circuit Failure  
B1289 Servo Motor Potentiometer Airintake Right Circuit Open  
B1290 Servo Motor Potentiometer Airintake Right Circuit Short To Battery  
B1291 Servo Motor Potentiometer Airintake Right Circuit Short To Ground  
B1292 Battery Power Relay Circuit Failure  
B1293 Battery Power Relay Circuit Open  
B1294 Battery Power Relay Circuit Short To Battery  
B1295 Battery Power Relay Circuit Short To Ground  
B1296 Power Supply Sensor Circuit Failure  
B1297 Power Supply Sensor Circuit Open  
B1298 Power Supply Sensor Circuit Short To Battery  
B1299 Power Supply Sensor Circuit Short To Ground  
B1300 Power Door Lock Circuit Failure  
B1301 Power Door Lock Circuit Open  
B1302 Accessory Delay Relay Coil Circuit Failure  
B1303 Accessory Delay Relay Coil Circuit Open  
B1304 Accessory Delay Relay Coil Circuit Short To Battery  
B1305 Accessory Delay Relay Coil Circuit Short To Ground  
B1306 Oil Level Switch Circuit Open

B1307 Oil Level Switch Circuit Short To Battery  
B1308 Oil Level Switch Circuit Short To Ground  
B1309 Power Door Lock Circuit Short To Ground  
B1310 Power Door Unlock Circuit Failure  
B1311 Power Door Unlock Circuit Open  
B1312 Lamp Headlamp Input Circuit Short To Battery  
B1313 Battery Saver Relay Coil Circuit Failure  
B1314 Battery Saver Relay Coil Circuit Open  
B1315 Battery Saver Relay Coil Circuit Short To Battery  
B1316 Battery Saver Relay Coil Circuit Short To Ground  
B1317 Battery Voltage High  
B1318 Battery Voltage Low  
B1319 Driver Door Ajar Circuit Failure  
B1320 Driver Door Ajar Circuit Open  
B1321 Driver Door Ajar Circuit Short To Battery  
B1322 Driver Door Ajar Circuit Short To Ground  
B1323 Door Ajar Lamp Circuit Failure  
B1324 Door Ajar Lamp Circuit Open  
B1325 Door Ajar Lamp Circuit Short To Battery  
B1326 Door Ajar Lamp Circuit Short To Ground  
B1327 Passenger Door Ajar Circuit Failure  
B1328 Passenger Door Ajar Circuit Open  
B1329 Passenger Door Ajar Circuit Short To Battery  
B1330 Passenger Door Ajar Circuit Short To Ground  
B1331 Decklid Ajar Rear Door Circuit Failure  
B1332 Decklid Ajar Rear Door Circuit Open  
B1333 Decklid Ajar Rear Door Circuit Short To Battery  
B1334 Decklid Ajar Rear Door Circuit Short To Ground  
B1335 Door Ajar RR Circuit Failure  
B1336 Door Ajar RR Circuit Open  
B1337 Door Ajar RR Circuit Short To Battery  
B1338 Door Ajar RR Circuit Short To Ground  
B1339 Chime Input Request Circuit Short To Battery  
B1340 Chime Input Request Circuit Short To Ground  
B1341 Power Door Unlock Circuit Short To Ground  
B1342 ECU Is Defective  
B1343 Heated Backlite Input Circuit Failure  
B1344 Heated Backlite Input Circuit Open  
B1345 Heated Backlite Input Circuit Short To Ground  
B1346 Heated Backlite Input Circuit Short To Battery  
B1347 Heated Backlite Relay Circuit Failure  
B1348 Heated Backlite Relay Circuit Open B1349  
Heated Backlite Relay Short To Battery B1350  
Heated Backlite Relay Short To Ground B1351  
Ignition Key-In Circuit Short To Battery B1352  
Ignition Key-In Circuit Failure  
B1353 Ignition Key-In Circuit Open  
B1354 Ignition Key-In Circuit Short To Ground  
B1355 Ignition Run Circuit Failure  
B1356 Ignition Run Circuit Open  
B1357 Ignition Run Circuit Short To Battery  
B1358 Ignition Run Circuit Short To Ground  
B1359 Ignition Run/Acc Circuit Failure  
B1360 Ignition Run/Acc Circuit Open  
B1361 Ignition Run/Acc Circuit Short To Battery  
B1362 Ignition Run/Acc Circuit Short To Ground  
B1363 Ignition Start Circuit Failure  
B1364 Ignition Start Circuit Open  
B1365 Ignition Start Circuit Short To Battery  
B1366 Ignition Start Circuit Short To Ground  
B1367 Ignition Tach Circuit Failure

B1368 Ignition Tach Circuit Open  
B1369 Ignition Tach Circuit Short To Battery  
B1370 Ignition Tach Circuit Short To Ground  
B1371 Illuminated Entry Relay Circuit Failure  
B1372 Illuminated Entry Relay Circuit Open  
B1373 Illuminated Entry Relay Short To Battery  
B1374 Illuminated Entry Relay Short To Ground  
B1375 Oil Change Lamp Circuit Open  
B1376 Oil Change Lamp Circuit Short To Battery  
B1377 Oil Change Lamp Circuit Failure  
B1378 Oil Change Lamp Circuit Short To Ground  
B1379 Oil Change Reset Button Circuit Short To Ground  
B1380 Oil Change Reset Button Circuit Failure  
B1381 Oil Change Reset Button Circuit Open  
B1382 Oil Change Reset Button Circuit Short To Battery  
B1383 Oil Level Lamp Circuit Short To Battery  
B1384 Oil Level Lamp Circuit Failure  
B1385 Oil Level Lamp Circuit Open  
B1386 Oil Level Lamp Circuit Short To Ground  
B1387 Oil Temperature Sensor Circuit Open  
B1388 Oil Temperature Sensor Circuit Short To Battery  
B1389 Oil Temperature Sensor Circuit Failure  
B1390 Oil Temperature Sensor Circuit Short To Ground  
B1391 Oil Level Switch Circuit Failure  
B1392 Power Door Memory Lock Relay Circuit Failure  
B1393 Power Door Memory Lock Relay Circuit Open  
B1394 Power Door Memory Lock Relay Circuit Short To Battery  
B1395 Power Door Memory Lock Relay Circuit Short To Ground  
B1396 Power Door Lock Circuit Short To Battery  
B1397 Power Door Unlock Circuit Short To Battery  
B1398 Driver Power Window One Touch Window Relay Circuit Failure  
B1399 Driver Power Window One Touch Window Relay Circuit Open  
B1400 Driver Power Window One Touch Window Relay Circuit Short To Battery  
B1401 Driver Power Window One Touch Window Relay Circuit Short To Ground  
B1402 Driver Power Window Down Switch Circuit Failure  
B1403 Driver Power Window Up Switch Circuit Failure  
B1404 Driver Power Window Down Circuit Open  
B1405 Driver Power Window Down Circuit Short To Battery  
B1406 Driver Power Window Down Circuit Short To Ground  
B1407 Driver Power Window Up Circuit Open  
B1408 Driver Power Window Up Circuit Short To Battery  
B1409 Driver Power Window Up Circuit Short To Ground  
B1410 Driver Power Window Motor Circuit Failure  
B1411 Driver Power Window Motor Circuit Open  
B1412 Driver Power Window Motor Circuit Short To Battery  
B1413 Driver Power Window Motor Circuit Short To Ground  
B1414 Power Window LR Motor Circuit Failure  
B1415 Power Window LR Motor Circuit Open  
B1416 Power Window LR Motor Circuit Short To Battery  
B1417 Power Window LR Motor Circuit Short To Ground  
B1418 Passenger Power Window Motor Circuit Failure  
B1419 Passenger Power Window Motor Circuit Open  
B1420 Passenger Power Window Motor Circuit Short To Battery  
B1421 Passenger Power Window Motor Circuit Short To Ground  
B1422 Power Window RR Motor Circuit Failure  
B1423 Power Window RR Motor Circuit Open  
B1424 Power Window RR Motor Circuit Short To Battery  
B1425 Power Window RR Motor Circuit Short To Ground  
B1426 Lamp Seat Belt Circuit Short To Battery  
B1427 Lamp Seat Belt Circuit Open  
B1428 Lamp Seat Belt Circuit Failure

B1429 Lamp Seat Belt Circuit Short To Ground  
B1430 Seat Belt Switch Circuit Short To Ground  
B1431 Wiper Brake/Run Relay Circuit Failure  
B1432 Wiper Brake/Run Relay Circuit Short To Battery  
B1433 Wiper Brake/Run Relay Circuit Short To Ground  
B1434 Wiper Hi/Low Speed Relay Coil Circuit Failure  
B1435 Wiper Hi/Low Speed Relay Coil Circuit Open  
B1436 Wiper Hi/Low Speed Relay Coil Circuit Short To Battery  
B1437 Wiper Hi/Low Speed Relay Coil Circuit Short To Ground  
B1438 Wiper Mode Select Switch Circuit Failure  
B1439 Wiper Mode Select Switch Circuit Open  
B1440 Wiper Mode Select Switch Circuit Short To Battery  
B1441 Wiper Mode Select Switch Circuit Short To Ground  
B1442 Door Handle Switch Circuit Failure  
B1443 Door Handle Switch Circuit Open  
B1444 Door Handle Switch Circuit Short To Battery  
B1445 Door Handle Switch Circuit Short To Ground  
B1446 Wiper Park Sense Circuit Failure  
B1447 Wiper Park Sense Circuit Open  
B1448 Wiper Park Sense Circuit Short To Battery  
B1449 Wiper Park Sense Circuit Short To Ground  
B1450 Wiper Wash/Delay Switch Circuit Failure  
B1451 Wiper Wash/Delay Switch Circuit Open  
B1452 Wiper Wash/Delay Switch Circuit Short To Battery  
B1453 Wiper Wash/Delay Switch Circuit Short To Ground  
B1454 Wiper Washer Fluid Lamp Circuit Failure  
B1455 Wiper Washer Fluid Lamp Circuit Open  
B1456 Wiper Washer Fluid Lamp Circuit Short To Battery  
B1457 Wiper Washer Fluid Lamp Circuit Short To Ground  
B1458 Wiper Washer Pump Motor Relay Circuit Failure  
B1459 Wiper Washer Pump Motor Relay Coil Circuit Open  
B1460 Wiper Washer Pump Motor Relay Coil Circuit Short To Battery  
B1461 Wiper Washer Pump Motor Relay Coil Circuit Short To Ground  
B1462 Seat Belt Switch Circuit Failure  
B1463 Seat Belt Switch Circuit Open  
B1464 Seat Belt Switch Circuit Short To Battery  
B1465 Wiper Brake/Run Relay Circuit Open  
B1466 Wiper Hi/Low Speed Not Switching  
B1467 Wiper Hi/Low Speed Circuit Motor Short To Battery  
B1468 Chime Input Request Circuit Failure  
B1469 Chime Input Request Circuit Open  
B1470 Lamp Headlamp Input Circuit Failure  
B1471 Lamp Headlamp Input Circuit Open  
B1472 Lamp Headlamp Input Circuit Short To Ground  
B1473 Wiper Low Speed Circuit Motor Failure  
B1474 Battery Saver Power Relay Circuit Short To Battery  
B1475 Accessory Delay Relay Contact Short To Battery  
B1476 Wiper High Speed Circuit Motor Failure  
B1477 Wiper Hi/Low Circuit Motor Short To Ground  
B1478 Power Window One Touch Up/Down Activated Simultaneously  
B1479 Wiper Washer Fluid Level Sensor Circuit Failure  
B1480 Wiper Washer Fluid Level Sensor Circuit Open  
B1481 Wiper Washer Fluid Level Sensor Circuit Short To Battery  
B1482 Wiper Washer Fluid Level Sensor Circuit Short To Ground  
B1483 Brake Pedal Input Circuit Failure  
B1484 Brake Pedal Input Open Circuit  
B1485 Brake Pedal Input Circuit Battery Short  
B1486 Brake Pedal Input Circuit Ground Short  
B1487 Door Handle Right Front Circuit Failure  
B1488 Door Handle Right Front Circuit Open  
B1489 Door Handle Right Front Short To Battery

B1490 Door Handle Right Front Short To Ground  
B1491 Ignition Cylinder Sensor Circuit Failure  
B1492 Ignition Cylinder Sensor Open Circuit  
B1493 Ignition Cylinder Sensor Battery Short  
B1494 Ignition Cylinder Sensor Ground Short  
B1495 Decklid Punch-Out Sensor Circuit Failure  
B1496 Decklid Punch-Out Sensor Open Circuit  
B1497 Decklid Punch-Out Sensor Battery Short  
B1498 Decklid Punch-Out Sensor Ground Short  
B1499 Lamp Turn Signal Left Circuit Failure  
B1500 Lamp Turn Signal Left Circuit Open  
B1501 Lamp Turn Signal Left Circuit Short To Battery  
B1502 Lamp Turn Signal Left Circuit Short To Ground  
B1503 Lamp Turn Signal Right Circuit Failure  
B1504 Lamp Turn Signal Right Circuit Open  
B1505 Lamp Turn Signal Right Circuit Short To Battery  
B1506 Lamp Turn Signal Right Circuit Short To Ground  
B1507 Flash To Pass Switch Circuit Failure  
B1508 Flash To Pass Switch Circuit Open  
B1509 Flash To Pass Switch Circuit Short To Battery  
B1510 Flash To Pass Switch Circuit Short To Ground  
B1511 Driver Door Handle Circuit Failure  
B1512 Driver Door Handle Circuit Open  
B1513 Driver Door Handle Circuit Short To Battery  
B1514 Driver Door Handle Circuit Short To Ground  
B1515 Seat Driver Occupied Switch Circuit Failure  
B1516 Seat Driver Occupied Switch Circuit Open  
B1517 Seat Driver Occupied Switch Circuit Short To Battery  
B1518 Seat Driver Occupied Switch Circuit Short To Ground  
B1519 Hood Switch Circuit Failure  
B1520 Hood Switch Circuit Open  
B1521 Hood Switch Circuit Short To Battery  
B1522 Hood Switch Circuit Short To Ground  
B1523 Keyless Entry Circuit Failure  
B1524 Keyless Entry Circuit Open  
B1525 Keyless Entry Circuit Short To Battery  
B1526 Keyless Entry Circuit Short To Ground  
B1527 Memory Set Switch Circuit Failure  
B1528 Memory Set Switch Circuit Open  
B1529 Memory Set Switch Circuit Short To Battery  
B1530 Memory Set Switch Circuit Short To Ground  
B1531 Memory 1 Switch Circuit Failure  
B1532 Memory 1 Switch Circuit Open  
B1533 Memory 1 Switch Circuit Short To Battery  
B1534 Memory 1 Switch Circuit Short To Ground  
B1535 Memory 2 Switch Circuit Failure  
B1536 Memory 2 Switch Circuit Open  
B1537 Memory 2 Switch Circuit Short To Battery  
B1538 Memory 2 Switch Circuit Short To Ground  
B1539 Mirror Driver Switch Assembly Circuit Failure  
B1540 Mirror Driver Switch Assembly Circuit Open  
B1541 Mirror Driver Switch Assembly Circuit Short To Battery  
B1542 Mirror Driver Switch Assembly Circuit Short To Ground  
B1543 Seat Direction Switch Assembly Circuit Failure  
B1544 Seat Direction Switch Assembly Circuit Open  
B1545 Seat Direction Switch Assembly Circuit Short To Battery  
B1546 Seat Direction Switch Assembly Circuit Short To Ground  
B1547 Power Window Master Circuit Failure  
B1548 Power Window Master Circuit Open  
B1549 Power Window Master Circuit Short To Battery  
B1550 Power Window Master Circuit Short To Ground

B1551 Decklid Release Circuit Failure  
B1552 Decklid Release Circuit Open  
B1553 Decklid Release Circuit Short To Battery  
B1554 Decklid Release Circuit Short To Ground  
B1555 Ignition Run/Start Circuit Failure  
B1556 Ignition Run/Start Circuit Open  
B1557 Ignition Run/Start Circuit Short To Battery  
B1558 Ignition Run/Start Circuit Short To Ground  
B1559 Door Lock Cylinder Circuit Failure  
B1560 Door Lock Cylinder Circuit Open  
B1561 Door Lock Cylinder Circuit Short To Battery  
B1562 Door Lock Cylinder Circuit Short To Ground  
B1563 Door Ajar Circuit Failure  
B1564 Door Ajar Circuit Open  
B1565 Door Ajar Circuit Short To Battery  
B1566 Door Ajar Circuit Short To Ground  
B1567 Lamp Headlamp High-Beam Circuit Failure  
B1568 Lamp Headlamp High-Beam Circuit Open  
B1569 Lamp Headlamp High-Beam Circuit Short To Battery  
B1570 Lamp Headlamp High-Beam Circuit Short To Ground  
B1571 Door Ajar LR Circuit Failure  
B1572 Door Ajar LR Circuit Open  
B1573 Door Ajar LR Circuit Short To Battery  
B1574 Door Ajar LR Circuit Short To Ground  
B1575 Lamp Park Input Circuit Failure  
B1576 Lamp Park Input Circuit Open  
B1577 Lamp Park Input Circuit Short To Battery  
B1578 Lamp Park Input Circuit Short To Ground  
B1579 Dim Panel Increase Input Circuit Failure  
B1580 Dim Panel Increase Input Circuit Open  
B1581 Dim Panel Increase Input Circuit Short To Battery  
B1582 Dim Panel Increase Input Circuit Short To Ground  
B1583 Dim Panel Decrease Input Circuit Failure  
B1584 Dim Panel Decrease Input Circuit Open  
B1585 Dim Panel Decrease Input Circuit Short To Battery  
B1586 Dim Panel Decrease Input Circuit Short To Ground  
B1587 Autolamp Delay Increase Circuit Failure  
B1588 Autolamp Delay Increase Circuit Open  
B1589 Autolamp Delay Increase Circuit Short To Battery  
B1590 Autolamp Delay Increase Circuit Short To Ground  
B1591 Autolamp Delay Decrease Circuit Failure  
B1592 Autolamp Delay Decrease Circuit Open  
B1593 Autolamp Delay Decrease Circuit Short To Battery  
B1594 Autolamp Delay Decrease Circuit Short To Ground  
B1595 Ignition Switch Illegal Input Code  
B1596 Service Continuous Codes  
B1597 Driver's Seat Seatback Autoglide Forward Switch Circuit Short to Ground  
B1598 Driver's Seat Seatback Autoglide Rearward Switch Circuit Short to  
Ground B1599 Passenger's Seatback Autoglide Forward Switch Circuit Short to  
Ground B1600 PATS Ignition Key Transponder Signal Is Not Received  
B1601 PATS Received Incorrect Key-Code From Ignition Key Transponder  
B1602 PATS Received Invalid Format Of Key-Code From Ignition Key Transponder  
B1603 Lamp Anti-Theft Indicator Circuit Failure  
B1604 Lamp Anti-Theft Indicator Circuit Open  
B1605 Lamp Anti-Theft Indicator Circuit Short To Battery  
B1606 Lamp Anti-Theft Indicator Circuit Short To Ground  
B1607 Illuminated Entry Input Circuit Failure  
B1608 Illuminated Entry Input Open Circuit  
B1609 Illuminated Entry Input Short Circuit To Battery  
B1610 Illuminated Entry Input Short Circuit To Ground  
B1611 Wiper Rear Mode Select Switch Circuit Failure

B1612 Wiper Rear Mode Select Switch Circuit Open  
B1613 Wiper Rear Mode Select Switch Circuit Short To Battery  
B1614 Wiper Rear Mode Select Switch Circuit Short To Ground  
B1615 Wiper Rear Disable Switch Circuit Failure  
B1616 Wiper Rear Disable Switch Circuit Open  
B1617 Wiper Rear Disable Switch Circuit Short To Battery  
B1618 Wiper Rear Disable Switch Circuit Short To Ground  
B1619 Wiper Rear Low Limit Input Circuit Failure  
B1620 Wiper Rear Low Limit Input Circuit Open  
B1621 Wiper Rear Low Limit Input Circuit Short To Battery  
B1622 Wiper Rear Low Limit Input Circuit Short To Ground  
B1623 Lamp Keypad Output Circuit Failure  
B1624 Lamp Keypad Output Open Circuit  
B1625 Lamp Keypad Output Short Circuit To Battery  
B1626 Lamp Keypad Output Short Circuit To Ground  
B1627 PRNDL Reverse Input Circuit Failure  
B1628 PRNDL Reverse Input Open Circuit  
B1629 PRNDL Reverse Input Short To Battery  
B1630 PRNDL Reverse Input Short Circuit To Ground  
B1631 Mirror Driver Left Circuit Failure  
B1632 Mirror Driver Left Circuit Open  
B1633 Mirror Driver Left Circuit Short To Battery  
B1634 Mirror Driver Left Circuit Short To Ground  
B1635 Mirror Driver Right Circuit Failure  
B1636 Mirror Driver Right Circuit Open  
B1637 Mirror Driver Right Circuit Short To Battery  
B1638 Mirror Driver Right Short To Ground  
B1639 Mirror Passenger Left Circuit Failure  
B1640 Mirror Passenger Left Circuit Open  
B1641 Mirror Passenger Left Circuit Short To Battery  
B1642 Mirror Passenger Left Circuit Short To Ground  
B1643 Mirror Passenger Right Circuit Failure  
B1644 Mirror Passenger Right Circuit Open  
B1645 Mirror Passenger Right Circuit Short To Battery  
B1646 Mirror Passenger Right Circuit Short To Ground  
B1647 Seat Driver Recline Forward Circuit Failure  
B1648 Seat Driver Recline Forward Circuit Open  
B1649 Seat Driver Recline Forward Circuit Short To Battery  
B1650 Seat Driver Recline Forward Circuit Short To Ground  
B1651 Seat Driver Recline Backward Circuit Failure  
B1652 Seat Driver Recline Backward Circuit Open  
B1653 Seat Driver Recline Backward Circuit Short To Battery  
B1654 Seat Driver Recline Backward Circuit Short To Ground  
B1655 Seat Driver Rear Up Circuit Failure  
B1656 Seat Driver Rear Up Circuit Open  
B1657 Seat Driver Rear Up Circuit Short To Battery  
B1658 Seat Driver Rear Up Circuit Short To Ground  
B1659 Seat Driver Front Up Circuit Failure  
B1660 Seat Driver Front Up Circuit Open  
B1661 Seat Driver Front Up Circuit Short To Battery  
B1662 Seat Driver Front Up Circuit Short To Ground  
B1663 Seat Driver Front Up/Down Motor Stalled  
B1664 Seat Driver Rear Up/Down Motor Stalled  
B1665 Seat Driver Forward/Backward Motor Stalled  
B1666 Seat Driver Recline Motor Stalled  
B1667 Mirror Driver Up/Down Motor Stalled  
B1668 Mirror Driver Right/Left Motor Stalled  
B1669 Mirror Passenger Up/Down Motor Stalled  
B1670 Mirror Passenger Right/Left Motor Stalled  
B1671 Battery Module Voltage Out Of Range  
B1672 Seat Driver Occupied Input Circuit Failure



B1673 Seat Driver Occupied Input Circuit Open  
B1674 Seat Driver Occupied Input Circuit Short To Battery  
B1675 Seat Driver Occupied Input Circuit Short To Ground  
B1676 Battery Pack Voltage Out Of Range  
B1677 Alarm Panic Input Circuit Failure  
B1678 Alarm Panic Input Circuit Open  
B1679 Alarm Panic Input Circuit Short To Battery  
B1680 Alarm Panic Input Circuit Short To Ground  
B1681 PATS Transceiver Module Signal Is Not Received  
B1682 PATS Is Disabled (Check Link Between PATS And Transponder)  
B1683 Mirror Driver/Passenger Switch Circuit Failure  
B1684 Mirror Driver/Passenger Switch Circuit Open  
B1685 Lamp Dome Input Circuit Failure  
B1686 Lamp Dome Input Circuit Open  
B1687 Lamp Dome Input Circuit Short To Battery  
B1688 Lamp Dome Input Circuit Short To Ground  
B1689 Autolamp Delay Circuit Failure  
B1690 Autolamp Delay Circuit Open  
B1691 Autolamp Delay Circuit Short To Battery  
B1692 Autolamp Delay Circuit Short To Ground  
B1693 Autolamp On Circuit Failure  
B1694 Autolamp On Circuit Open  
B1695 Autolamp On Circuit Short To Battery  
B1696 Autolamp On Circuit Short To Ground  
B1697 Mirror Driver/Passenger Switch Circuit Short To Battery  
B1698 Mirror Driver/Passenger Switch Circuit Short To Ground  
B1699 Passenger's Seat Occupied Switch Circuit Short to Ground  
B1700 Passenger's Seatbelt Tension Reducer Circuit Short to  
Ground B1701 Seat Driver Recline Forward Switch Circuit Failure  
B1702 Seat Driver Recline Forward Switch Circuit Open  
B1703 Seat Driver Recline Forward Switch Circuit Short To Battery  
B1704 Seat Driver Recline Forward Switch Circuit Short To Ground  
B1705 Seat Driver Recline Rearward Switch Circuit Failure  
B1706 Seat Driver Recline Rearward Switch Circuit Open  
B1707 Seat Driver Recline Rearward Switch Circuit Short To Battery  
B1708 Seat Driver Recline Rearward Switch Circuit Short To Ground  
B1709 Seat Driver Front Up Switch Circuit Failure  
B1710 Seat Driver Front Up Switch Circuit Open  
B1711 Seat Driver Front Up Switch Circuit Short To Battery  
B1712 Seat Driver Front Up Switch Circuit Short To Ground  
B1713 Seat Driver Front Down Switch Circuit Failure  
B1714 Seat Driver Front Down Switch Circuit Open  
B1715 Seat Driver Front Down Switch Circuit Short To Battery  
B1716 Seat Driver Front Down Switch Circuit Short To Ground  
B1717 Seat Driver Forward Switch Circuit Failure  
B1718 Seat Driver Forward Switch Circuit Open  
B1719 Seat Driver Forward Switch Circuit Short To Battery  
B1720 Seat Driver Forward Switch Circuit Short To Ground  
B1721 Seat Driver Rearward Switch Circuit Failure  
B1722 Seat Driver Rearward Switch Circuit Open  
B1723 Seat Driver Rearward Switch Circuit Short To Battery  
B1724 Seat Driver Rearward Switch Circuit Short To Ground  
B1725 Seat Driver Rear Up Switch Circuit Failure  
B1726 Seat Driver Rear Up Switch Circuit Open  
B1727 Seat Driver Rear Up Switch Circuit Short To Battery  
B1728 Seat Driver Rear Up Switch Circuit Short To Ground  
B1729 Seat Driver Rear Down Switch Circuit Failure  
B1730 Seat Driver Rear Down Switch Circuit Open  
B1731 Seat Driver Rear Down Switch Circuit Short To Battery  
B1732 Seat Driver Rear Down Switch Circuit Short To Ground  
B1733 Mirror Driver Vertical Switch Circuit Failure

B1734 Mirror Driver Vertical Switch Circuit Open  
B1735 Mirror Driver Vertical Switch Circuit Short To Battery  
B1736 Mirror Driver Vertical Switch Circuit Short To Ground  
B1737 Mirror Driver Horizontal Switch Circuit Failure  
B1738 Mirror Driver Horizontal Switch Circuit Open  
B1739 Mirror Driver Horizontal Switch Circuit Short To Battery  
B1740 Mirror Driver Horizontal Switch Circuit Short To Ground  
B1741 Mirror Passenger Vertical Switch Circuit Failure  
B1742 Mirror Passenger Vertical Switch Circuit Open  
B1743 Mirror Passenger Vertical Switch Circuit Short To Battery  
B1744 Mirror Passenger Vertical Switch Circuit Short To Ground  
B1745 Mirror Passenger Horizontal Switch Circuit Failure  
B1746 Mirror Passenger Horizontal Switch Circuit Open  
B1747 Mirror Passenger Horizontal Switch Circuit Short To  
Battery B1748 Mirror Passenger Horizontal Switch Circuit Short  
To Ground B1749 Park/Neutral Switch Circuit Failure  
B1750 Park/Neutral Switch Circuit Open  
B1751 Park/Neutral Switch Circuit Short To Battery  
B1752 Park/Neutral Switch Circuit Short To Ground  
B1753 Hazard Flash Output Circuit Failure  
B1754 Hazard Flash Output Circuit Open  
B1755 Hazard Flash Output Circuit Short Battery  
B1756 Hazard Flash Output Circuit Short To Ground  
B1757 Seat Driver Rear Down Circuit Failure  
B1758 Seat Driver Rear Down Circuit Open  
B1759 Seat Driver Rear Down Circuit Short To Battery  
B1760 Seat Driver Rear Down Circuit Short To Ground  
B1761 Seat Driver Front Down Circuit Failure  
B1762 Seat Driver Front Down Circuit Open  
B1763 Seat Driver Front Down Circuit Short To Battery  
B1764 Seat Driver Front Down Circuit Short To Ground  
B1765 Seat Driver Forward Circuit Failure  
B1766 Seat Driver Forward Circuit Open  
B1767 Seat Driver Forward Circuit Short To Battery  
B1768 Seat Driver Forward Circuit Short To Ground  
B1769 Seat Driver Backward Circuit Failure  
B1770 Seat Driver Backward Circuit Open  
B1771 Seat Driver Backward Circuit Short To Battery  
B1772 Seat Driver Backward Circuit Short To Ground  
B1773 Mirror Driver Up Circuit Failure  
B1774 Mirror Driver Up Circuit Open  
B1775 Mirror Driver Up Circuit Short To Battery  
B1776 Mirror Driver Up Circuit Short To Ground  
B1777 Driver's Seatbelt Tension Reducer Circuit Short to Ground  
B1778 Mirror Driver Down Circuit Failure  
B1779 Mirror Driver Down Circuit Open  
B1780 Mirror Driver Down Circuit Short To Battery  
B1781 Mirror Driver Down Short To Ground  
B1782 Mirror Passenger Up Circuit Failure  
B1783 Mirror Passenger Up Circuit Open  
B1784 Mirror Passenger Up Circuit Short To Battery  
B1785 Mirror Passenger Up Circuit Short To Ground  
B1786 Mirror Passenger Down Circuit Failure  
B1787 Mirror Passenger Down Circuit Open  
B1788 Mirror Passenger Down Circuit Short To Battery  
B1789 Mirror Passenger Down Circuit Short To Ground  
B1790 Autolamp Sensor Input Circuit Failure  
B1791 Autolamp Sensor Input Circuit Open  
B1792 Autolamp Sensor Input Circuit Short To Battery  
B1793 Autolamp Sensor Input Circuit Short To Ground  
B1794 Lamp Headlamp Low-Beam Circuit Failure

B1795 Lamp Headlamp Low-Beam Circuit Open  
B1796 Lamp Headlamp Low-Beam Circuit Short To Battery  
B1797 Lamp Headlamp Low-Beam Circuit Short To Ground  
B1798 Lamp Turn Signal Front Output Circuit Failure  
B1799 Lamp Turn Signal Front Output Circuit Open  
B1800 Lamp Turn Signal Front Output Circuit Short To Battery  
B1801 Lamp Turn Signal Front Output Circuit Short To Ground  
B1802 Lamp Turn Signal Rear Output Circuit Failure  
B1803 Lamp Turn Signal Rear Output Circuit Open  
B1804 Lamp Turn Signal Rear Output Circuit Short To Battery  
B1805 Lamp Turn Signal Rear Output Circuit Short To Ground  
B1806 Lamp Tail Output Circuit Failure  
B1807 Lamp Tail Output Circuit Open  
B1808 Lamp Tail Output Circuit Short To Battery  
B1809 Lamp Tail Output Circuit Short To Ground  
B1810 Lamp Backup Switch Input Circuit Failure  
B1811 Lamp Backup Switch Input Circuit Open  
B1812 Lamp Backup Switch Input Circuit Short To Battery  
B1813 Lamp Backup Switch Input Circuit Short To Ground  
B1814 Wiper Rear Motor Down Relay Coil Circuit Failure  
B1815 Wiper Rear Motor Down Relay Coil Circuit Open  
B1816 Wiper Rear Motor Down Relay Coil Circuit Short To Battery  
B1817 Wiper Rear Motor Down Relay Coil Circuit Short To Ground  
B1818 Wiper Rear Motor Up Relay Coil Circuit Failure  
B1819 Wiper Rear Motor Up Relay Coil Circuit Open  
B1820 Wiper Rear Motor Up Relay Coil Circuit Short To Battery  
B1821 Wiper Rear Motor Up Relay Coil Circuit Short To Ground  
B1822 Wiper Rear Park Sense Input Circuit Failure  
B1823 Wiper Rear Park Sense Input Circuit Open  
B1824 Wiper Rear Park Sense Input Circuit Short To Battery  
B1825 Wiper Rear Park Sense Input Circuit Short To Ground  
B1826 Wiper Rear High Limit Input Circuit Failure  
B1827 Wiper Rear High Limit Input Circuit Open  
B1828 Wiper Rear High Limit Input Circuit Short To Battery  
B1829 Wiper Rear High Limit Input Circuit Short To Ground  
B1830 Door Unlock Disarm Switch Circuit Failure  
B1831 Door Unlock Disarm Switch Circuit Open  
B1832 Door Unlock Disarm Switch Circuit Short To Battery  
B1833 Door Unlock Disarm Switch Circuit Short To Ground  
B1834 Door Unlock Disarm Output Circuit Failure  
B1835 Door Unlock Disarm Output Circuit Open  
B1836 Door Unlock Disarm Output Circuit Short To Battery  
B1837 Door Unlock Disarm Output Circuit Short To Ground  
B1838 Battery Saver Power Relay Circuit Failure  
B1839 Wiper Rear Motor Circuit Failure  
B1840 Wiper Front Power Circuit Failure  
B1841 Wiper Front Power Circuit Open  
B1842 Wiper Front Power Circuit Short To Battery  
B1843 Wiper Front Power Circuit Short To Ground  
B1844 Phone Handset Circuit Failure  
B1845 Ignition Tamper Circuit Failure  
B1846 Ignition Tamper Circuit Open  
B1847 Ignition Tamper Circuit Short To Battery  
B1848 Ignition Tamper Circuit Short To Ground  
B1849 Climate Control Temperature Differential Circuit Failure  
B1850 Climate Control Temperature Differential Circuit Open  
B1851 Climate Control Temperature Differential Circuit Short To Battery  
B1852 Climate Control Temperature Differential Circuit Short To Ground  
B1853 Climate Control Air Temperature Internal Sensor Motor Circuit Failure  
B1854 Climate Control Air Temperature Internal Sensor Motor Circuit Open

B1855 Climate Control Air Temperature Internal Sensor Motor Circuit Short To Battery  
B1856 Climate Control Air Temperature Internal Sensor Motor Circuit Short To Ground  
B1857 Climate Control On/Off Switch Circuit Failure  
B1858 Climate Control A/C Pressure Switch Circuit Failure  
B1859 Climate Control A/C Pressure Switch Circuit Open  
B1860 Climate Control A/C Pressure Switch Circuit Short To Battery  
B1861 Climate Control A/C Pressure Switch Circuit Short To Ground  
B1862 Climate Control A/C Lock Sensor Failure  
B1863 Ground ECU Circuit Open  
B1864 Battery Power Supply ECU Circuit Failure  
B1865 Battery Power Supply ECU Circuit Open  
B1866 Battery Power Supply ECU Circuit Short To Battery  
B1867 Battery Power Supply ECU Circuit Short To Ground  
B1868 Lamp Air Bag Warning Indicator Circuit Failure  
B1869 Lamp Air Bag Warning Indicator Circuit Open  
B1870 Lamp Air Bag Warning Indicator Circuit Short To Battery  
B1871 Passenger Air Bag Disable Module Fault  
B1872 Turn Signal / Hazard Power Feed Circuit Short To Battery  
B1873 Turn Signal / Hazard Power Feed Circuit Short To Ground  
B1874 Cellular Phone Handset Not Present  
B1875 Turn Signal / Hazard Switch Signal Circuit Failure  
B1876 Seatbelt Driver Pretensioner Circuit Failure  
B1877 Seatbelt Driver Pretensioner Circuit Open  
B1878 Seatbelt Driver Pretensioner Circuit Short to Battery  
B1879 Seatbelt Driver Pretensioner Circuit Short to Ground  
B1880 Seatbelt Passenger Pretensioner Circuit Failure  
B1881 Seatbelt Passenger Pretensioner Circuit Open  
B1882 Seatbelt Passenger Pretensioner Circuit Short to Battery  
B1883 Seatbelt Passenger Pretensioner Circuit Short to Ground  
B1884 PAD Warning Lamp Inoperative  
B1885 Seatbelt Driver Pretensioner Circuit Resistance Low on Squib  
B1886 Seatbelt Passenger Pretensioner Circuit Resistance Low on Squib  
B1887 Air Bag Driver Circuit Resistance Low or Shorted Together  
B1888 Air Bag Passenger Circuit Resistance Low or Shorted Together  
B1889 Passenger Airbag Disable Module Sensor Obstructed  
B1890 PAD Warning Lamp Circuit Short to Battery  
B1891 Air Bag Tone Warning Indicator Circuit Short to Battery  
B1892 Air Bag Tone Warning Indicator Circuit Failure  
B1893 GPS Antenna Open Circuit  
B1894 Wiper Rear Motor Speed Sense Circuit Failure  
B1895 Driver's / Passenger's Door Ajar Output Circuit Failure  
B1896 Driver's / Passenger's Door Ajar Output Circuit Short to Battery  
B1897 Horn Switch Circuit Failure  
B1898 Chime Input #2 Circuit Short to Ground  
B1899 Microphone Input Signal Circuit Open  
B1900 Driver Side Airbag Fault  
B1901 Air Bag Crash Sensor #1 Feed/Return Circuit Short To Ground  
B1902 Air Bag Crash Sensor #1 Ground Circuit Failure  
B1903 Air Bag Crash Sensor #1 Ground Circuit Short To Battery  
B1904 Air Bag Crash Sensor #2 Feed/Return Circuit Failure  
B1905 Air Bag Crash Sensor #2 Feed/Return Circuit Short To Battery  
B1906 Air Bag Crash Sensor #2 Feed/Return Circuit Short To Ground  
B1907 Air Bag Crash Sensor #2 Ground Circuit Failure  
B1908 Air Bag Crash Sensor #2 Ground Circuit Short To Battery  
B1909 Air Bag Crash Sensor #2 Ground Circuit Short To Ground  
B1910 Air Bag Diagnostic Monitor Ground Circuit Failure  
B1911 Air Bag Diagnostic Monitor Ground Circuit Short To Battery  
B1912 Air Bag Diagnostic Monitor Ground Circuit Short To Ground  
B1913 Air Bag Driver/Passenger Circuit Short To Ground

B1914 Air Bag Crash Sensors #1 / #2 Circuit Short To Ground  
B1915 Air Bag Driver Circuit Failure  
B1916 Air Bag Driver Circuit Short To Battery  
B1917 Air Bag Memory Clear Circuit Failure  
B1918 Air Bag Memory Clear Circuit Open  
B1919 Air Bag Memory Clear Circuit Short To Battery  
B1920 Air Bag Passenger Circuit Failure  
B1921 Air Bag Diagnostic Monitor Ground Circuit Open  
B1922 Air Bag Safing Sensor Output Circuit Short To Battery  
B1923 Air Bag Memory Clear Circuit Short To Ground  
B1924 Air Bag Internal Diagnostic Monitor Fault or System Disarm Fault  
B1925 Air Bag Passenger Circuit Short To Battery  
B1926 Air Bag Passenger Pressure Switch Circuit Failure  
B1927 Passenger Side Airbag Fault  
B1928 Air Bag Safing Sensor Output Circuit Failure  
B1929 Air Bag Safing Sensor Output Circuit Open  
B1930 Air Bag Safing Sensor Output Circuit Short To Ground  
B1931 Air Bag Crash Sensor #1 Feed/Return Circuit Failure  
B1932 Air Bag Driver Circuit Open  
B1933 Air Bag Passenger Circuit Open  
B1934 Air Bag Driver Inflator Circuit Resistance Low on Squib  
B1935 Air Bag Passenger Inflator Circuit Resistance Low on Squib  
B1936 Air Bag Driver Circuit Short To Ground  
B1937 Air Bag Passenger Pressure Switch Circuit Open  
B1938 Air Bag Passenger Circuit Short To Ground  
B1939 Air Bag Passenger Pressure Switch Circuit Short To Ground  
B1941 Air Bag Crash Sensor #1 Feed/Return Circuit Open  
B1942 Air Bag Crash Sensor #2 Feed/Return Circuit Open  
B1943 Air Bag Crash Sensor #1 Ground Circuit Short To Ground  
B1944 Air Bag Crash Sensor #1 Ground Circuit Open  
B1945 Air Bag Crash Sensor #2 Ground Circuit Open  
B1946 Climate Control A/C Post Evaporator Sensor Circuit Failure  
B1947 Climate Control A/C Post Evaporator Sensor Circuit Short To Ground  
B1948 Climate Control Water Temperature Sensor Circuit Failure  
B1949 Climate Control Water Temperature Sensor Circuit Short To Ground  
B1950 Seat Rear Up/Down Potentiometer Feedback Circuit Failure  
B1951 Seat Rear Up/Down Potentiometer Feedback Circuit Open  
B1952 Seat Rear Up/Down Potentiometer Feedback Circuit Short To Battery  
B1953 Seat Rear Up/Down Potentiometer Feedback Circuit Short To Ground  
B1954 Seat Front Up/Down Potentiometer Feedback Circuit Failure  
B1955 Seat Front Up/Down Potentiometer Feedback Circuit Open  
B1956 Seat Front Up/Down Potentiometer Feedback Circuit Short To Battery  
B1957 Seat Front Up/Down Potentiometer Feedback Circuit Short To Ground  
B1958 Seat Recline Forward/Backward Potentiometer Feedback Circuit Failure  
B1959 Seat Recline Forward/Backward Potentiometer Feedback Circuit Open  
B1960 Seat Recline Forward/Backward Potentiometer Feedback Circuit Short  
To Battery  
B1961 Seat Recline Forward/Backward Potentiometer Feedback Circuit Short To  
Ground  
B1962 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Failure  
B1963 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Open  
B1964 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To  
Battery  
B1965 Seat Horizontal Forward/Rearward Potentiometer Feedback Circuit Short To  
Ground  
B1966 A/C Post Heater Sensor Circuit Failure  
B1967 A/C Post Heater Sensor Circuit Short To Ground  
B1968 A/C Water Pump Detection Circuit Failure  
B1969 A/C Clutch Magnetic Control Circuit Failure  
B1970 Passenger Seatback Forward Switch Circuit Short to Ground  
B1971 Passenger Seatback Rearward Switch Circuit Short to Ground

B1972 Passenger Rear Seat Up Switch Circuit Short to Battery  
B1973 Passenger Rear Seat Down Switch Circuit Short to Battery  
B1974 Passenger's Seat Recline Forward Switch Circuit Short to Battery  
B1975 Passenger's Seat Recline Back Switch Circuit Short to Battery  
B1976 Passenger's Seat Forward Switch Circuit Short to Battery  
B1977 Passenger's Front Seat Up Switch Circuit Short to Battery  
B1978 Passenger's Front Seat Down Switch Circuit Short to  
Battery B1979 Passenger Seat Rearward Switch Circuit Short to  
Battery B1980 Bulb - Outage Condition Detected  
B1981 Memory Off Switch Circuit Short to Battery  
B1982 Driver's Door Unlock Relay Circuit Failure  
B1983 Driver's Door Unlock Relay Circuit Short to Battery  
B1984 Seat Switch Lumbar Inflate Circuit Failure  
B1985 Seat Switch Lumbar Deflate Circuit Failure  
B1986 Driver's Seat Seatback Autoglide Rearward Switch Circuit Failure  
B1987 Pedal Forward / Rearward Motor Stalled  
B1988 Pedal Position Forward Switch Circuit Short to Battery  
B1989 Pedal Position Rearward Switch Circuit Short to Battery  
B1990 Pedal Forward / Rearward Potentiometer Feedback Circuit Failure  
B1991 Pedal Forward / Rearward Potentiometer Feedback Circuit Short to Battery  
B1992 Driver Side, Side mount Airbag Circuit Short to Vbatt  
B1993 Driver Side, Side mount Airbag Circuit Short to Ground  
B1994 Driver Side, Side mount Airbag Circuit Open  
B1995 Driver Side, Side mount Airbag Low resistance on Squib  
B1996 Passenger Side, Side mount Airbag Circuit Short to Vbatt  
B1997 Passenger Side, Side mount Airbag Circuit Short to Ground  
B1998 Passenger Side, Side mount Airbag Circuit Open  
B1999 Passenger Side, Side mount Airbag Low resistance on Squib  
B2100 Door Driver Key Cylinder Switch Failure  
B2101 Head Rest Switch Circuit Failure  
B2102 Antenna Circuit Short to Ground  
B2103 Antenna Not Connected  
B2104 Door Passenger Key Cylinder Switch Failure  
B2105 Throttle Position Input Out of Range Low  
B2106 Throttle Position Input Out of Range High  
B2107 Front Wiper Motor Relay Circuit Short to Vbatt  
B2108 Trunk Key Cylinder Switch Failure  
B2109 Heated Wind Shield Relay Short to Vbatt (changed from Failure 2/6/97)  
B2110 Front Wiper Motor Relay Circuit Open (changed from Failure  
2/6/97) B2111 All Door Lock Input Short to Ground  
B2112 Door Driver Set Switch Stuck Failure  
B2113 Heated Windshield Input Short to Ground  
B2114 Front Washer Input Short to Ground  
B2115 Rear Washer Input Short to Ground  
B2116 Door Driver Reset Switch Stuck Failure  
B2117 Driver Side, Side mount Airbag Low capacitance on Squib  
B2118 Passenger Side, Side mount Airbag Low capacitance on Squib  
B2119 Compressor Failure  
B2120 Door Passenger Set Switch Stuck Failure  
B2122 Driver Side Satellite Communication Circuit Short to Ground  
B2123 Passenger Side Satellite Communication Circuit Short to Ground  
B2124 Door Passenger Reset Switch Stuck Failure  
B2128 Central Lock Motor Failure  
B2129 Central Lock Feedback Failure  
B2130 Double Lock Timeout Failure  
B2131 Double Lock Feedback Failure  
B2132 Dimmer switch Circuit Short to Gnd  
B2133 Brake Motor Warning lamp Circuit Failure  
B2134 Brake Motor Warning lamp Circuit Short to Vbatt  
B2135 Park Brake Applied Warning Lamp Circuit Failure  
B2136 Park Brake Applied Warning Lamp Circuit Short To Battery

B2139 Data Mismatch (receive data does not match what was expected) B2141 NVM Configuration Failure  
B2142 NVM TIC Failure  
B2143 NVM Memory Failure  
B2144 NVM Alarm Data Failure  
B2145 NVM RF HR Failure  
B2146 Seat Recline Motor Position Out of Range  
B2148 PWM Input Circuit Failure  
B2149 Seat Front Vertical Motor Position Out of Range  
B2150 Power Supply #1 Circuit Short to Ground  
B2151 Power Supply #2 Circuit Short to Ground  
B2152 Seat Rear Vertical Motor Position Out of Range  
B2153 Rear Echo Sensor Circuit Failure  
B2154 Front Echo Sensor Circuit Failure  
B2155 Seat Horizontal Motor Position Out of Range  
B2156 Rear Doppler Sensor Circuit Failure  
B2157 Front Doppler Sensor Circuit Failure  
B2158 Seat Recline Motor Memory Position Out of Range  
B2159 Memory #1 output Short to Ground  
B2160 Memory #1 output Short to VBatt  
B2161 Seat Front Vertical Motor Memory Position Out of Range  
B2162 Data Mismatch #2 (receive data does not match what was expected) B2163 Clutch Position Fault  
B2164 Seat Rear Vertical Motor Memory Position Out of Range  
B2165 Gear shift position Fault  
B2166 Gear select position Fault  
B2167 Seat Horizontal Motor Memory Position Out of Range  
B2168 Unable to confirm Unlock Condition  
B2169 Unable to confirm lock Condition  
B2170 Steering Column Lock Switch Circuit Failure  
B2172 Inertia Switch input Circuit Open  
B2174 Window Driver Rear Remote Up Switch Short to Battery  
B2175 A/C Request Signal Circuit Short to Ground  
B2176 Overdrive switch circuit short to Vbatt  
B2177 Interior Scanning Sensor Circuit Failure  
B2178 Window Driver Rear Remote Down Switch Short to Battery  
B2179 Front Wiper Select Switch "A" Short to Ground  
B2180 Front Wiper Select Switch "B" Short to Ground  
B2181 Front Wiper Select Switch "C" Short to Ground  
B2182 Window Passenger Front Remote Up Switch Short to Battery  
B2183 Front Wiper Select Switch "H" Short to Ground  
B2184 Front Wiper Select Switch "W" Short to Ground  
B2185 Rear Wiper Select Switch "D" Short to Ground  
B2186 Window Passenger Front Remote Down Switch Short to Battery  
B2187 Rear Wiper Select Switch "B" Short to Ground  
B2188 Rear Wiper Select Switch "E" Short to Ground  
B2190 Window Passenger Rear Remote Up Switch Short to Battery  
B2194 Window Passenger Rear Remote Down Switch Short to Battery  
B2195 Driver Window Up / Down Power Circuit Short to Ground  
B2196 Passenger Window Up / Down Power Circuit Short to Ground  
B2197 TV Module Error  
B2198 TrafficMaster Module Error  
B2199 VICS Module Error  
B2200 No Communication to TV Module (No Fitting of TV)  
B2201 No Communication With Traffic MasterModule  
B2202 No Communication to VICS Module (No Fitting of VICS)  
B2203 CD-ROM Error  
B2204 GPS Antenna Connection Open or Short  
B2205 GPS Receiver Error  
B2206 Gyroscope Error  
B2207 ECU ROM Checksum Error

B2208 Communication Link to Display and Switch Module Error  
B2209 Interior Lamp Override Switch Open Circuit B2210  
Interior Lamp Override Switch Short to Ground B2211 Low  
Coolant Lamp Output Circuit Short to Battery B2214  
Window Passenger Front Up Switch Short to Battery  
B2215 Window Passenger Front Down Switch Short to Battery  
B2219 Window Driver Front Current Feedback Exceeded  
B2220 Window Driver Rear Current Feedback Exceeded  
B2221 Window Passenger Front Current Feedback Exceeded  
B2222 Window Passenger Rear Current Feedback Exceeded  
B2223 Mirror Driver Drive Circuit Failure  
B2224 Mirror Passenger Drive Circuit Failure  
B2225 Front Crash Sensor Mount Fault  
B2226 Front Crash Sensor Internal Fault  
B2227 Front Crash Sensor Driver Communications Fault  
B2228 Air Bag Driver Circuit Short to Ground - Loop #2  
B2229 Air Bag Passenger Circuit Short to Ground - Loop #2  
B2230 Air Bag Driver Circuit Short to Battery - Loop #2  
B2231 Air Bag Passenger Circuit Short to Battery - Loop #2  
B2232 Air Bag Driver Circuit Open - Loop #2  
B2233 Air Bag passenger Circuit Open - Loop #2  
B2234 Air Bag Driver Inflator Circuit Resistance Low on Squib - Loop #2  
B2235 Air Bag Passenger Inflator Circuit  
B2236 Weak or Defected Electric Vehicle Battery Module Fault  
B2237 Vehicle Signal indicating Park While VSS Present  
B2238 Power Cable For Power Sliding Door Broken  
B2239 Rear Cargo Door Set Switch Stuck (Short to Ground)  
B2240 Rear Cargo Door Reset Switch Stuck (Short to Ground)  
B2241 Rear Cargo Door Lock Circuit Short to Ground  
B2242 Rear Cargo Door Unlock Circuit Open  
B2243 Driver Rear Door Ajar Circuit Open  
B2244 Driver Sliding Door Ajar Circuit Short to GND  
B2245 Passenger Rear Door Ajar Circuit Open  
B2246 Passenger Sliding Door Ajar Circuit Short to GND  
B2247 EV Battery Pack Temperature Fault  
B2248 Heated Windshield Relay Coil Circuit Failure  
B2249 Head Lamp Relay Coil Short to Battery  
B2250 All Doors Unlock Relay Circuit Failure  
B2251 Parklamp Output Relay Driver Circuit Failure  
B2252 Parklamp Output Relay Dirver Short to Battery  
B2300 Seat Driver Memory Position Error  
B2301 Seat Passenger Memory Position Error  
B2302 Seat Headrest Feedback Potentiometer Circuit Failure  
B2303 Seat Headrest Feedback Potentiometer Circuit Open  
B2304 Seat Headrest Feedback Potentiometer Circuit Short to Battery  
B2305 Seat Headrest Feedback Potentiometer Circuit Short to Ground  
B2306 Seat Headrest Motor Stalled  
B2310 Mirror Driver Memory Position Error  
B2311 Mirror Passenger Memory Position Error  
B2312 Mirror Passenger Horizontal Feedback Potentiometer Circuit Failure  
B2313 Mirror Passenger Horizontal Feedback Potentiometer Circuit Open  
B2314 Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to  
Battery  
B2315 Mirror Passenger Horizontal Feedback Potentiometer Circuit Short to Ground  
B2316 Mirror Passenger Vertical Feedback Potentiometer Circuit Failure  
B2317 Mirror Passenger Vertical Feedback Potentiometer Circuit Open  
B2318 Mirror Passenger Vertical Feedback Potentiometer Circuit Short to  
Battery B2319 Mirror Passenger Vertical Feedback Potentiometer Circuit Short  
to Ground B2320 Mirror Driver Horizontal Feedback Potentiometer Circuit  
Failure  
B2321 Mirror Driver Horizontal Feedback Potentiometer Circuit Open  
B2322 Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Battery



B2323 Mirror Driver Horizontal Feedback Potentiometer Circuit Short to Ground  
B2324 Mirror Driver Vertical Feedback Potentiometer Circuit Failure  
B2325 Mirror Driver Vertical Feedback Potentiometer Circuit Open  
B2326 Mirror Driver Vertical Feedback Potentiometer Circuit Short to  
Battery B2327 Mirror Driver Vertical Feedback Potentiometer Circuit Short  
to Ground B2328 Column Reach Feedback Potentiometer Circuit Failure  
B2329 Column Reach Feedback Potentiometer Circuit Open  
B2330 Column Reach Feedback Potentiometer Circuit Short to Battery  
B2331 Column Reach Feedback Potentiometer Circuit Short to Ground  
B2332 Column Tilt Feedback Potentiometer Circuit Failure  
B2333 Column Tilt Feedback Potentiometer Circuit Open  
B2334 Column Tilt Feedback Potentiometer Circuit Short to  
Battery B2335 Column Tilt Feedback Potentiometer Circuit Short  
to Ground B2336 Mirror Switch Assembly Circuit Failure  
B2337 Mirror Switch Assembly Circuit Open  
B2338 Mirror Switch Assembly Circuit Short to Battery  
B2339 Mirror Switch Assembly Circuit Short to Ground  
B2340 Column Reach Motor Stalled  
B2341 Column Tilt Motor Stalled  
B2342 Seat Switch Reference Voltage Positive Common Open Circuit  
B2343 Seat Switch Reference Voltage Positive Common Supply Low Voltage  
B2344 Seat Switch Reference Voltage Positive Common Supply Voltage Fault  
B2345 Seat Switch Reference Voltage Negative Common Open Circuit  
B2346 Mirror Switch Reference Voltage Positive Common Open Circuit  
B2347 Mirror Switch Reference Voltage Positive Common Supply Low Voltage  
B2348 Mirror Switch Reference Voltage Positive Common Supply Voltage Fault  
B2349 Mirror Switch Reference Voltage Negative Common Open Circuit  
B2350 Steering Column Switch Circuit Short to Battery  
B2351 Steering Column Switch Circuit Failure  
B2352 Driver Memory Power Switch Indicator Circuit Short to Battery  
B2353 Driver Mirror Power Driver Circuit Short Ground  
B2354 Driver Mirror Horizontal / Vertical Feedback Potentiometer Circuit Open  
B2355 Passenger Mirror Horizontal / Vertical Feedback Potentiometer Circuit  
Open B2357 Driver Window Down Current Sense Low Circuit Failure  
B2362 Remote Open/Close signal Circuit Short to Ground  
B2363 Optical Sensor System Failure  
B2364 Fuel Filler Door Circuit Open  
B2365 B-pillar Power Sliding Door Open/Close Switch Input Ckt Short to Gnd  
B2366 IP Power Sliding Door Open/Close switch Ckt Short to Gnd  
B2367 Power Sliding Door Override Switch Input Ckt Short to Gnd  
B2368 Steering Column Switch Circuit Out of Range  
B2369 Chime OUTPUT Request Ckt Short to Ground  
B2373 LED #1 Circuit Short to Battery  
B2374 Power Sliding Detent (Latch) Circuit Failure  
B2380 Heater Coolant Temp sensor circuit Short to GND  
B2381 Heater Coolant Temp sensor circuit Open  
B2384 Audio Reverse Aid Mute Input Ckt Failure  
B2385 Audio Navigation Mute Input Ckt Failure  
B2401 Audio Tape Deck Mechanism Fault  
B2402 Audio CD/DJ Thermal Shutdown Fault  
B2403 Audio CD/DJ Internal Fault  
B2404 Audio Steering Wheel Switch Circuit Fault  
B2405 Audio Single-Disc CD Player Thermal Shutdown Fault  
B2406 Audio Single-Disc CD Player Internal Fault  
B2416 Climate Control Recirculation Actuator Out of Limits  
B2425 Remote Keyless Entry Out of Synchronization  
B2426 Passenger Solar Radiation Sensor Circuit Open  
B2427 Passenger Solar Radiation Sensor Circuit Short to Ground  
B2428 A/C Post Heater Sensor #2 Circuit Failure  
B2429 A/C Post Heater Sensor #2 Circuit Short to Ground  
B2431 Transponder Programming Failed

B2432 Drivers Seat Belt Buckle Switch Circuit Open  
B2433 Drivers Seat Belt Buckle Switch Circuit Short to Battery  
B2434 Drivers Seat Belt Buckle Switch Circuit Short to Ground  
B2435 Drivers Seat Belt Buckle Switch Resistance out of Range  
B2436 Passengers Seat Belt Buckle Switch Circuit Open  
B2437 Passengers Seat Belt Buckle Switch Circuit Short to Battery  
B2438 Passengers Seat Belt Buckle Switch Circuit Short to Ground  
B2439 Passengers Seat Belt Buckle Switch Resistance out of Range  
B2440 Passenger Side, Side crash sensor mount fault  
B2441 Driver Side, Side crash sensor mount fault  
B2442 Intrusion Sensor Fault  
B2443 Powertrain Performance Mode Switch Circuit failure  
B2444 Driver Side Crash Sensor Internal Fault  
B2445 Passenger Side Crash Sensor Internal Fault  
B2446 RESCU/VEMS Input Circuit Open  
B2447 RESCU/VEMS Input Circuit Short to Battery  
B2448 RESCU/VEMS Input Circuit Short to Ground  
B2449 Aux Heater Glow Plug Circuit Short to Ground  
B2450 Aux Heater Glow Plug Circuit Open  
B2451 Aux Heater Fuel Pump Circuit Short to Ground  
B2452 Aux Heater Fuel Pump Circuit Open  
B2453 Aux Heater Blower Fan Circuit Short to Ground  
B2454 Aux Heater Blower Fan Circuit Open  
B2455 Aux Heater Blower Faulted  
B2456 Aux Heater Coolant Sensor Circuit Short to Ground  
B2457 Aux Heater Coolant Sensor Circuit Open  
B2458 Aux Heater Overheat Sensor Circuit Short to Ground  
B2459 Aux Heater Overheat Sensor Circuit Open  
B2460 Aux Heater Flame Sensor Circuit Short to Ground  
B2461 Aux Heater Flame Sensor Circuit Open  
B2462 Aux Heater Flame Out Fault  
B2463 Aux Heater Overheat Fault  
B2464 Aux Heater Start Time Exceeded  
B2465 Aux Heater Start Counter Overrun/System Locked (same as below ?)  
B2466 Aux Heater Overheat Counter Overrun/System Locked  
B2467 Aux Heater Cool Down Time Exceeded (may be con to a453-5 )  
B2468 Aux Heater Coolant Pump Circuit Short to Ground  
B2469 Aux Heater Coolant Pump Circuit Open  
B2470 Interior Fan Control Circuit Short to Ground  
B2471 Interior Fan Control Circuit Open  
B2472 Fog Lamp Switch Failure  
B2473 Passenger Door Disarm Switch ckt Short to Ground B2474  
Passenger Door Lock Switch Circuit Shorted to Ground B2475  
Passenger Door Unlock Switch Circuit Shorted to Ground B2476  
RADIO PRESENT SWITCH Ckt Failure  
B2477 Module Configuration Failure  
B2478 ANTI THEFT INPUT SIGNAL SHORT TO GROUND  
B2479 BRAKE PARK SWITCH CIRCUIT SHORT TO GROUND  
B2480 LF CORNER LAMP OUTPUT Ckt Short to Battery  
B2481 Convertible Top Up/Down switch Fault  
B2482 RF CORNER LAMP OUTPUT Ckt Short to Battery  
B2483 Enable Signal Open Circuit  
B2484 Disable Signal Short to Ground  
B2485 LF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery  
B2487 RF SIDE REPEATER LAMP OUTPUT Ckt Short to Battery  
B2489 UNDERHOOD LAMP OUTPUT CIRCUIT Failure  
B2490 UNDERHOOD LAMP OUTPUT CIRCUIT Short to Battery  
B2491 RF PARK LAMP OUTPUT CIRCUIT Short to Battery  
B2492 Already Programmed (Test Mode DTC Only !!!)  
B2493 LF PARK LAMP OUTPUT CIRCUIT Short to Battery  
B2494 ANTI THEFT HORN OUTPUT CIRCUIT Short to Batt

B2495 ANTI THEFT HORN OUTPUT CIRCUIT Failure  
B2496 ANTI THEFT HORN OUTPUT CIRCUIT Short to Gnd  
B2499 COURTESY LAMP OUTPUT Failure  
B2500 COURTESY LAMP OUTPUT Ckt Short to Battery  
B2501 LF LAMP LOW BEAM CIRCUIT Failure  
B2502 LF LAMP LOW BEAM CIRCUIT Short to Battery  
B2503 RF LAMP LOW BEAM CIRCUIT Failure  
B2504 RF LAMP LOW BEAM CIRCUIT Short to Battery  
B2505 LF LAMP HIGH BEAM CIRCUIT Failure  
B2506 LF LAMP HIGH BEAM CIRCUIT Short to Battery  
B2507 RF LAMP HIGH BEAM CIRCUIT Failure  
B2508 RF LAMP HIGH BEAM CIRCUIT Short to Battery  
B2509 Rear Fog Lamp Switch Circuit Failure  
B2510 Main Blower Motor Relay Circuit Short to Battery  
B2511 Horn Output Relay Circuit Short to Battery  
B2512 Front Fog Lamp Relay Ckt Short to Battery  
B2513 Blower (Fan) Circuit Failure  
B2514 Blower (Fan) Circuit Short to Vbatt  
B2515 Heater Blower Relay Circuit Failure  
B2516 Blower Control Circuit Failure  
B2517 Emergency Power Off System Faulted  
B2518 Compressor Overtemp Fault  
B2519 High Mount Stop Lamp Circuit Failure  
B2520 High Mount Stop Lamp Circuit Short to Battery  
B2523 License Lamp Circuit Failure  
B2524 License Lamp Circuit Short to Battery  
B2525 Left Rear Backup Lamp Circuit Failure  
B2526 Left Rear Backup Lamp Circuit Short to Battery  
B2527 Left Rear Stop lamp Circuit Failure  
B2528 Left Rear Stop lamp Circuit Short to Battery  
B2529 Left Rear Turn Lamp Circuit Failure  
B2530 Left Rear Turn Lamp Circuit Short to Battery  
B2531 Right Rear Backup Lamp Circuit Failure  
B2532 Right Rear Backup Lamp Circuit Short to Battery  
B2533 Right Rear Stop lamp Circuit Failure  
B2534 Right Rear Stop lamp Circuit Short to Battery  
B2535 Right Rear Turn Lamp Circuit Failure  
B2536 Right Rear Turn Lamp Circuit Short to Battery  
B2539 Aux A/C Mode Position Reference Circuit Short to Ground  
B2540 Aux A/C Mode Position Reference Circuit Short to Battery  
B2543 Aux A/C Control Switch Reference Circuit Short to Ground  
B2544 Aux A/C Control Switch Reference Circuit Short to Battery  
B2545 System Power Relay Circuit Short to Battery  
B2546 System Power Relay Circuit Failure  
B2550 LAMP DOME OUTPUT Circuit Short to Ground  
B2553 Disable Signal Output Circuit Short to Battery  
B2554 LAMP DOME OUTPUT Circuit Failure  
B2555 LAMP DOME OUTPUT Circuit Short to Battery  
B2556 Enable Signal Circuit Short to Battery  
B2557 Left Power Sliding Door Open/Close Output Circuit Short to Battery  
B2558 Right Power Sliding Door Open/Close Output Circuit Short to Battery  
B2559 Aux A/C Blower Motor Relay Circuit Short to Battery  
B2560 Aux A/C Blower Motor Relay Circuit Short to Ground  
B2561 Aux A/C Blower Speed 1 Circuit Failure  
B2562 Aux A/C Blower Speed 1 Circuit Short to Ground  
B2563 Aux A/C Blower Speed 2 Circuit Failure  
B2564 Aux A/C Blower Speed 2 Circuit Short to Ground  
B2565 Right Tail Lamp Circuit Failure  
B2566 Right Tail Lamp Circuit Short to Ground  
B2567 Reverse Mirror Output Circuit Failure  
B2568 Reverse Mirror Output Circuit Short to Ground

B2569 Liftgate Disarm Switch Circuit Short to Ground  
B2570 Right Lamp Outage Signal Circuit Short to Ground  
B2571 Left Lamp Outage Signal Circuit Short to Ground  
B2580 Aux Blower Sense Switch Circuit Failure  
B2581 Passenger Seat Occupant Detection Circuit Short To Ground  
B2582 Passenger Seat Occupant Detection Circuit Open  
B2583 Child Seat Detection Circuit Short to Ground  
B2584 Child Seat Detection Circuit Open  
B2585 Anti Theft Input Signal Circuit Short To Battery  
B2586 Headlamp Mode Select Circuit Failure  
B2587 Passenger Seat Occupant Detection Circuit Short To Battery  
B2588 Child Seat Detection Circuit Short To Battery  
B2589 Unexpected Door Reversal During Close  
B2590 Vehicle Park/Speed Signal Circuit Failure  
B2591 Detent Signal Missing During Unlatch  
B2592 PSD Not Fully Closed (Module Commanded Successfully)  
B2593 Power Sliding Door Opened During Module Close Command  
B2594 No Movement Detected After an Unlatch During Power Open  
B2595 Anti Theft Input Signal Circuit Failure  
B2596 Headlamp Aim Output Relay Circuit Short To Battery  
B2597 Headlamp Aim Output Relay Circuit Failure  
B2598 Headlamp Relay Circuit Failure  
B2599 Tailgate Release Open Circuit  
B2600 Double Locking Door Motor Frozen  
B2601 No Latch Signal Sensed on Closing and Door Reversed  
B2602 Missing Latch Signal During Power Sliding Door Unlatch  
B2603 PSD Not Fully Closed During Self-Test  
B2604 Power Sliding Door On/Off Switch Open Circuit  
B2605 Disable Signal Open Circuit  
B2606 A/C Temperature Sensor Out of Range

[www.dogacelektronik.com](http://www.dogacelektronik.com)

**GÜNCEL TÜRKÇE OBD II ARIZA KODLARI  
TEKNİK BİLGİLERİ  
ARIZA TESPİT CİHAZLARI**