

**GÜNCEL TÜRKÇE OBD II ARIZA KODLARI  
TEKNİK BİLGİLER ARIZA TESPİT SİSTEMLERİ**

TOYOTA

P1100 BARO Sensor Circuit.  
P1120 Accelerator Pedal Position Sensor Circuit.  
P1121 Accelerator Pedal Position Sensor Range/Performance Problem.  
P1125 Throttle Control Motor Circuit.  
P1126 Magnetic Clutch Circuit.  
P1127 ETCS Actuator Power Source Circuit.  
P1128 Throttle Control Motor Lock.  
P1129 Electric Throttle Control System.  
P1130 Air/Fuel Sensor Circuit Range/Performance. (Bank 1 Sensor 1)  
P1133 Air/Fuel Sensor Circuit Response. (Bank 1 Sensor 1)  
P1135 Air/Fuel Sensor Heater Circuit Response. (Bank 1 Sensor 1)  
P1150 Air/Fuel Sensor Circuit Range/Performance. (Bank 1 Sensor 2)  
P1153 Air/Fuel Sensor Circuit Response. (Bank 1 Sensor 2)  
P1155 Air/Fuel Sensor Heater Circuit. (Bank 1 Sensor 2)  
P1200 Fuel Pump Relay Circuit.  
P1300 Igniter Circuit Malfunction - No. 1.  
P1310 Igniter Circuit Malfunction - No. 2.  
P1335 No Crankshaft Position Sensor Signal - Engine Running.  
P1349 VVT System.  
P1400 Sub-Throttle Position Sensor.  
P1401 Sub-Throttle Position Sensor Range/Performance Problem.  
P1405 Turbo Pressure Sensor Circuit.  
P1406 Turbo Pressure Sensor Range/Performance Problem.  
P1410 EGR Valve Position Sensor Circuit Malfunction.  
P1411 EGR Valve Position Sensor Circuit Range/Performance.  
P1500 Starter Signal Circuit.  
P1510 Boost Pressure Control Circuit.  
P1511 Boost Pressure Low.  
P1512 Boost Pressure High.  
P1520 Stop Lamp Switch Signal Malfunction.  
P1565 Cruise Control Main Switch Circuit.  
P1600 ECM BATT Malfunction  
P1605 Knock Control CPU.  
P1630 Traction Control System.  
P1633 ECM.  
P1652 Idle Air Control Valve Control Circuit.  
P1656 OCV Circuit.  
P1658 Wastegate Valve Control Circuit.  
P1661 EGR Circuit.  
P1662 EGR by-pass Valve Control Circuit.  
P1780 Park/Neutral Position Switch Malfunction (Only For A/T)