

**GÜNCEL TÜRKÇE OBD II ARIZA KODLARI
TEKNİK BİLGİLER
ARIZA TESPİT ÇÖZÜMLERİ**

VOLVO

P1101 Volvo Power Stage Group A
P1102 Volvo Power Stage Group B
P1111 Volvo Ambient Air Temp
P1112 Volvo Ambient Air Temp
P1113 Volvo Ambient Air Temp
P1132 Volvo O2 Sensor Front, Bank 1
P1133 Volvo O2 Sensor Front, Bank 1
P1134 Volvo O2 Sensor Front, Bank 1
P1139 Volvo O2 Sensor Rear, Bank 1
P1140 Volvo O2 Sensor Rear, Bank 1
P1152 Volvo O2 Sensor Front, Bank 2
P1153 Volvo O2 Sensor Front, Bank 2
P1154 Volvo O2 Sensor Front, Bank 2
P1159 Volvo O2 Sensor Signal Ageing
P1160 Volvo O2 Sensor Signal Ageing
P1171 Volvo Fuel Adaption, Bank 1
P1172 Volvo Fuel Adaption, Bank 1
P1174 Volvo Fuel Adaption, Bank 1
P1175 Volvo Fuel Adaption, Bank 1
P1177 Volvo Fuel Adaption, Bank 1
P1178 Volvo Fuel Adaption, Bank 1
P1179 Volvo Fuel Adaption, Bank 1
P1181 Volvo Fuel Adaption, Bank 2
P1182 Volvo Fuel Adaption, Bank 2
P1184 Volvo Fuel Adaption, Bank 2
P1185 Volvo Fuel Adaption, Bank 2
P1187 Volvo Fuel Adaption, Bank 2
P1188 Volvo Fuel Adaption, Bank 2
P1189 Volvo Fuel Adaption, Bank 2
P1237 Volvo Turbo Control Valve
P1238 Volvo Turbo Control Valve
P1307 Volvo Acceleration Sensor, Signal
P1308 Volvo Acceleration Sensor, Signal
P1310 Volvo Misfire from at least 1 Cylinder - TWC Damage
P1325 Volvo Knock Sensors
P1326 Volvo Fault in ECM, KS Control Circuit
P1327 Volvo Fault in ECM, Knock Control Circuit
P1328 Volvo Fault in ECM, Knock Control
Circuit P1329 Volvo Fault in ECM, KS Control
Circuit P1330 Volvo CVVT Solenoid
P1332 Volvo CVVT Solenoid
P1350 Volvo Ignition Coil 1 primary
P1351 Volvo Ignition Coil 1 primary
P1352 Volvo Ignition Coil 2 primary

P1353 Volvo Ignition Coil 2
primary P1354 Volvo Ignition Coil
3 primary P1355 Volvo Ignition
Coil 3 primary P1356 Volvo
Ignition Coil 4 primary P1357
Volvo Ignition Coil 4 primary
P1358 Volvo Ignition Coil 5
primary P1359 Volvo Ignition Coil
5 primary P1360 Volvo Ignition
Coil 6 primary P1361 Volvo
Ignition Coil 6 primary
P1401 Volvo Fault in ECM, ECT Sensor Circuit's NTC -
Connection
P1403 Volvo Fault in ECM, ECM Box's Temp.
Sensor
P1404 Volvo Fault in ECM, ECM Box's Temp.
Sensor
P1405 Volvo Temperature Warning Level
2
P1406 Volvo Temperature Warning > 100 degrees
C P1416 Volvo EGR Temperature Sensor Signal
P1417 Volvo EGR Temperature Sensor
Signal
P1418 Volvo EGR Temperature Sensor
Signal
P1440 Volvo Fuel Cap
Missing
P1480 Volvo PWM fan control
P1481 Volvo Fan relay 1/2 speed /
PWM
P1482 Volvo Fan relay 1/2 speed /
PWM
P1486 Volvo Fan relay 1/1 speed
P1487 Volvo Fan relay 1/1
speed
P1505 Volvo IAC Valve Opening
Signal P1506 Volvo IAC Valve
Opening Signal P1507 Volvo IAC
Valve Closing Signal P1508 Volvo
IAC Valve Closing Signal P1513
Volvo Brake pos sensor
P1602 Volvo Ignition Discharge Module (IDM) Group
B P1604 Volvo Ignition Discharge Module (IDM)
Group D P1605 Volvo Ignition Discharge Module
(IDM) Group E
P1617 Volvo Fault in Lead Between AW 50-52 and Motronic 4.3 (MIL
Requested) P1618 Volvo Fault in Lead Between AW 50-52 and Motronic 4.3
(MIL Requested) P1619 Volvo Engine Cooling Fan (FC) Low-Speed Signal
P1620 Volvo Engine Cooling Fan (FC) Low-Speed
Signal
P1621 Volvo Diagnostic Trouble Code (DTC) in Automtic Transmission
Control
Module (TCM)
P1623 Volvo ETS .amp / MIL on
P1625 Volvo MIL lamp output
P1626 Volvo MIL lamp output
P1627 Volvo CAN
P1628 Volvo CAN
P1629 Volvo CAN
P1630 Volvo CAN bus node global std
code
P1631 Volvo TCM node
P1632 Volvo RTC
P1633 Volvo Vehicle speed signal
P1635 Volvo ECM internal temp
sensor P1636 Volvo ECM internal
temp sensor

P1637 Volvo ECM internal temp high temp level
1
P1638 Volvo ECM internal temp high temp level
1
P1640 Volvo Interlock,
powerstage P1641 Volvo
Interlock, powerstage P1642
Volvo Interlock, powerstage
P1646 Volvo A/C relay control
P1647 Volvo A/C relay control
P1649 Volvo CVVT Solenoid
P1650 Volvo CVVT Solenoid
P1651 Volvo Torque signal comparison
2
P1652 Volvo Safety Fuel Cut-
off
P1655 Volvo CVVT Solenoid

P1656 Volvo CVVT Solenoid
P1660 Volvo Cruise Control Lever &
Logic P1661 Volvo Cruise Control Lever
& Logic P1662 Volvo Cruise Control
Lever & Logic P1663 Volvo Cruise
Control Lever & Logic P1672 Volvo +5V
power supply
P1673 Volvo +5V power supply
P1680 Volvo Immobilizer
request



111120002